

Assembly Instructions



wedi® Corner Seats | M, L

wedi® Corner Seat M


- 17" x 17" (wall sides), thickness 4" (Item# 073784300)

wedi® Corner Seat L


- 24" x 24" (wall sides), thickness 4" (Item# 073784400)

wedi® Seat assembly set consists of:


- Seat element
- (2) mounting brackets
- (6) fasteners
- wedi® meshtape
- tube of wedi® joint sealant

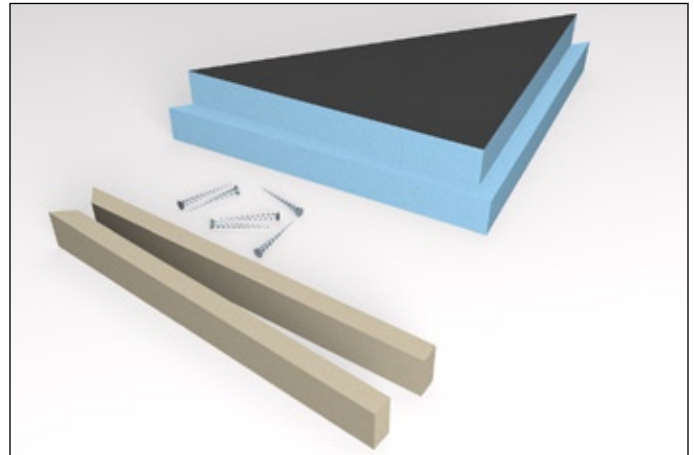


Installation:

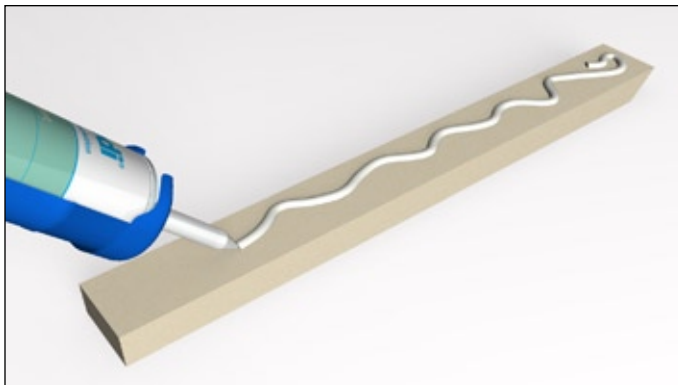


1. Apply wedi® joint sealant on the mounting brackets side that will be attached to the wedi® wall.

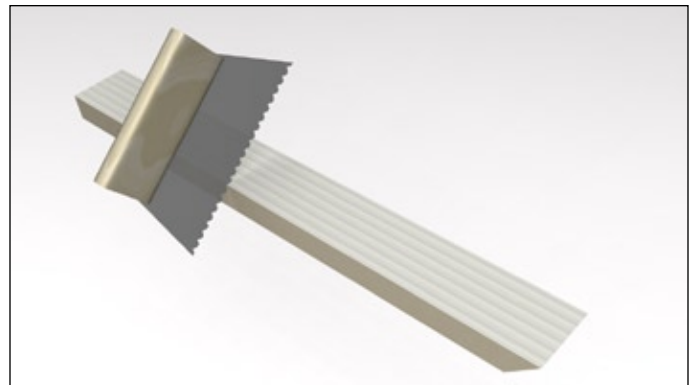


2. Evenly distribute the joint sealant with a notched trowel until the whole contact area is covered.

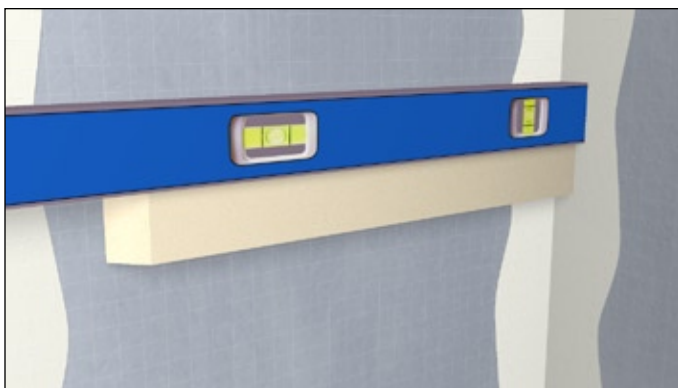


3. Use a level to make sure you can achieve a slight pitch (1/8" over 1 ft).

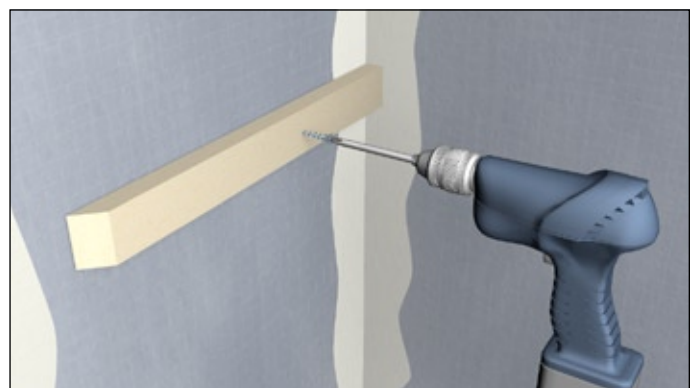


4. Mount the brackets through the wedi® wall panels into the solid 2' x 4' wooden framework.

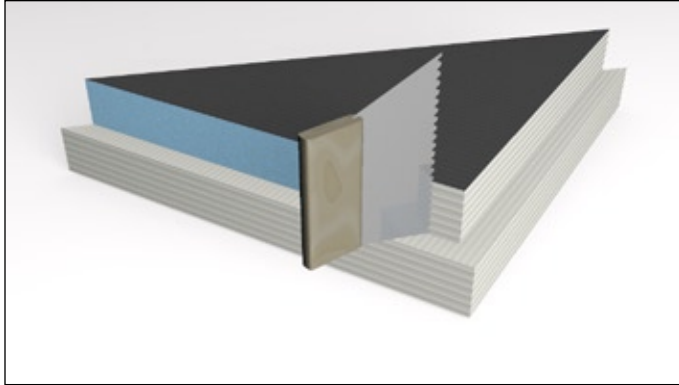


5. Apply wedi® joint sealant to the blue foam edges of the seat that will contact wedi® wall or brackets using a notched trowel.

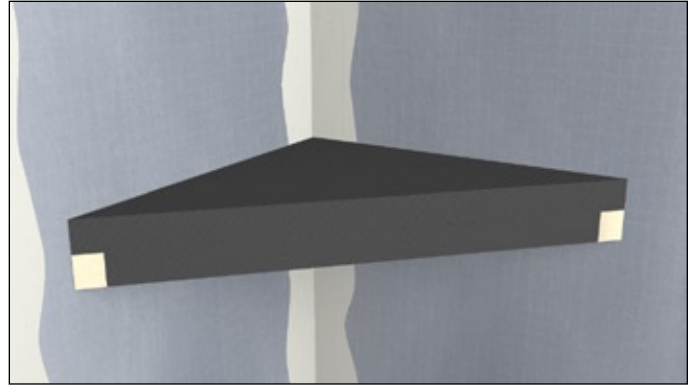

6. Press the seat element into position and apply a weight (i.e. Tile box) so that the sealant can set under bond pressure.

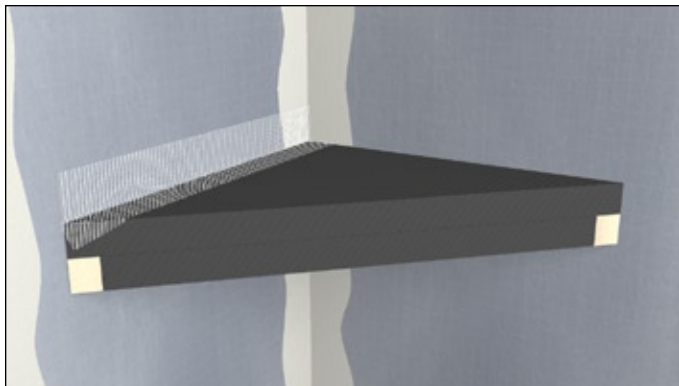

7. Apply wedi® meshtape and tape the transition joint between seat element and wedi® wall. Apply a flat thinset mortar bed over the meshtape and fully embed it.

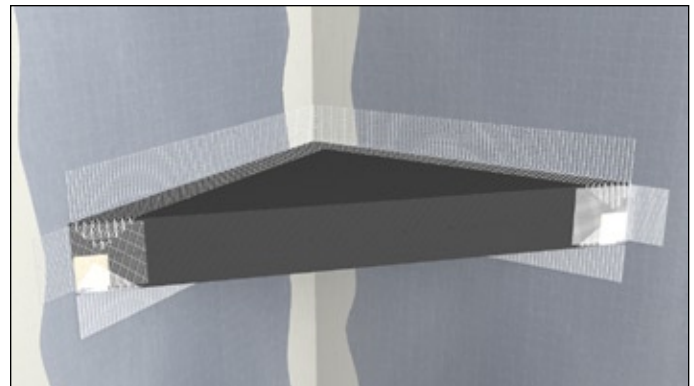

8. The same step happens now on the underside of the seat element where it is connected to the wall using mesh tape and thinset mortar. The shirt vertical seams are taped with mesh and thinset mortar as well.



wedi Corporation

1100 Landmeier Road, Suite 200 • Elk Grove Village, IL 60007
 Tel. 877-933-WEDI (9334) • Fax. 847-357-9819
 info@wedicorp.com • www.wedicorp.com